

COBRA

MODELS: HT55040VZ (DYM400202)

COBRA CORDLESS HEDGE TRIMMER OWNER'S MANUAL



Cobra Garden Machinery

Henton and Chattell Ltd., London Road, Nottingham NG2 3HW UK

www.cobragarden.co.uk






WARNING :




For your own safety please read this manual before attempting to operate your new unit. Failure to follow instructions can result in serious personal injury. Spend a few moments to familiarize yourself with your garden tool before each use. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well.

CONTENTS

SECTION 1 SYMBOLS MARKED ON THE PRODUCT.....	3
SECTION 2 GENERAL SAFETY RULES.....	6
SECTION 3 GENERAL IDENTIFICATION.....	14
SECTION 4 TECHNICAL DATA.....	15
SECTION 5 ASSEMBLY.....	16
SECTION 6 OPERATING THE HEDGE TRIMMER.....	17
SECTION 7 MAINTENANCE AND CARE.....	18
SECTION 8 TROUBLESHOOTING.....	19
SECTION 9 WARRANTY.....	20
SECTION 10 ENVIRONMENTALLY FRIENDLY DISPOSAL.....	20
SECTION 11 EC-DECLARATION OF CONFORMITY	21

1. SYMBOLS MARKED ON THE PRODUCT

SYMBOLS	NAME	EXPLANATION
	CE Marking	The product meets the demands and regulations set by the European Community (now European Union).
	WEEE marking	CAUTION! Unusable power tools do not belong with domestic waste. They must be taken to a communal collecting point for environmentally friendly disposal in accordance with local regulations.
	Read the operator's instructions	To reduce the risk of injury. User must read and understand operator's manual before using this product.
	Do not expose to rain	Don't leave your tool exposed to outdoor or rain.
	Wear gloves	To reduce the risk to your hands, please wear gloves!

	Wear eye protection	To reduce the risk to your eyes, please wear eye protection!
	Keep bystanders away.	Keep all bystanders away.
	Noise level marking	Your tool noise is not more than 96dB.

Accumulator Disposal:

Old accumulators and batteries must not be added to household waste, but should be disposed of in accordance with the applicable legislation. Take unusable rechargeable batteries to the dealer's or community's battery collection point.

Disposing of the packaging: The packaging is made of cardboard and separately labeled foil which is also recyclable. Take these materials to a recycling centre.

Battery packs/batteries:



Li-Ion

Do not dispose of batteries into household waste. Keep away from water or fire. Battery packs/batteries must be collected, recycled or disposed of in an environmentally-friendly way.

Only for EC countries:

Defective or dead batteries must be recycled according to the directive 2006/66/EC

2. GENERAL SAFETY RULES

General Power Tool Safety Warnings

▲ WARNING :

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery operated (cordless) power tool.

2.1 WORK AREA SAFETY

a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids gases or dust. Power tools create sparks which may ignite the dust or fumes

c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control. Set a safe working area.

2.2 PERSONAL SAFETY

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or

medication. A moment of distraction while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

f) Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected

and properly used. Use of dust collection can reduce dust-related hazards.

2.3 POWER TOOL USE AND CARE

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

2.4 BATTERY TOOL USE AND CARE

a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with

water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

2.5 SERVICE

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Accumulator Disposal:

Old Accumulators and batteries must not be added to household waste, but should be disposed of in accordance with the applicable legislation.

Take unusable rechargeable batteries to the dealer's or community's battery collection point.

Disposing of the packaging:

The packaging is made of cardboard and separately labeled foil which is also recyclable.

Take these materials to a recycling centre.

Battery packs/batteries:



Li-ion

Do not dispose of batteries into household waste, water or fire. Battery packs/batteries must be collected, recycled or disposed of in an environmentally -friendly way.

Only for EC countries:

Defective or dead batteries must be recycled

according to the directive 2006/66/EC

2.6 HEDGE TRIMMER SAFETY WARNINGS

1. Keep all parts of the body away from the cutter blade. Do not remove cut material nor hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material and battery removed. A moment of distraction while operating the hedge trimmer may result in serious personal injury.

2. Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover. Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.

3. Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring. Cutting blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

2.7 ADDITIONAL WARNINGS

1. This tool is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been

given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

2. When working with the machine, always hold it firmly with both hands and provide for a secure stance. The power tool is guided more secure with both hands.

3. Always ensure all handles and guards are fitted when using the machine. Never attempt to use an incomplete machine or one fitted with an unauthorized modification.

4. Wait until the machine has come to a stand still before placing it down.

5. Do not open the battery. Danger of short circuiting. Protect the battery against heat and fire. There is danger of explosion.

6. In the case of damage and improper use of the battery, vapours may be emitted. Provide for fresh air and seek medical help in case of complaints. The vapours can irritate the respiratory system.

7. When the battery is defective, liquid can escape and come into contact with adjacent components. Check any parts concerned. Clean such parts or replace them, if required.

8. Use the battery only in conjunction with your power tool.

This measure alone protects the battery against dangerous overload.

2.8 SAFETY WARNINGS FOR BATTERY CHARGERS

1. Keep the battery charger away from rain or moisture. Penetration of water in the battery charger increases the risk of an electric shock.

2. Do not charge other batteries. The battery charger is suitable only for charging lithium ion batteries within the listed voltage range. Otherwise there is danger of fire and explosion.

3. Keep the battery charger clean. Contamination can lead to danger of an electric shock.

4. Before each use, check the battery charger, cable and plug. If damage is detected, do not use the battery charger. Never open the battery charger yourself. Have repairs performed only by a qualified technician and only using original spare parts. Damaged battery chargers, cables and plugs increase the risk of an electric shock.

5. Do not operate the battery charger on easily inflammable surfaces (e. g., paper, textiles, etc.) or surroundings. The heating of the battery charger during the charging process can pose a fire hazard.

6. Children should be supervised to ensure that they do not play with the battery charger.

3. GENERAL IDENTIFICATION

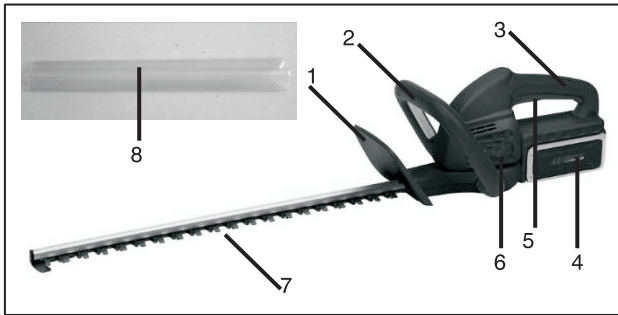 


Fig.1

- 1. Front handle guard 2. Front handle 3. Rear handle 4. Battery
- 5. Switch trigger 6. Casing 7. Blade 8. Blade guard

4. TECHNICAL DATA

Model:	HT55040VZ (DYM400202)
Rated voltage:	40V d.c.
No Load Speed	17000/min
Cutting length	550mm
Cutting width	20mm
Net weight:	3.02kg
Sound pressure level at the operator's position:	81.4dB(A) K=3 dB(A)
Measured sound power level:	92.8dB(A) K=3.33dB(A)
Guaranteed Sound Power Level:	96dB(A)
Vibration:	2.89m/s ² K=1.5 m/s ²

Lithium-ion Battery						
Model Number	DYMA104	DYMA72E	DYMA81	DYMA151	DYMA154	DYMA155
Rated Voltage	40Vd.c.	40Vd.c.	40Vd.c.	40Vd.c.	40Vd.c.	40Vd.c.
Capacity	5.0AH/180Wh	4.0AH/144Wh	2.5AH/90Wh	2.5AH/90Wh	4.0AH/144Wh	5.0AH/180Wh
Number of Battery	20pcs	20pcs	10pcs	10pcs	20pcs	20pcs

Battery Charger	
Model Number	DYMA83
Input	220-240V~, 50Hz, 1A
Output	40Vd.c., 2A
Allowable Charging Temperature Range	0-50°C

5. ASSEMBLY

⚠ WARNING: Switch off and remove battery from machine before adjusting or cleaning. The blades continue to move for a fraction of a second after the hedge trimmer is switched off. Do not touch the moving blades.

5.1 ASSEMBLE THE BATTERY

1. Insert the battery pack into battery holder. (Fig.2A/2B)
2. Make sure the latch on bottom of battery pack snaps in place and that battery pack is fully seated.



Fig.2A



Fig.2B

5.2 REMOVE THE BATTERY

1. Press and hold the battery latch button at the bottom of the battery pack. (Fig.2C)
2. Remove battery pack from the product. (Fig.2D)

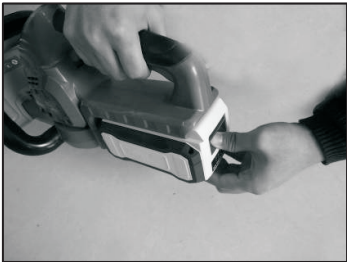 


Fig.2C

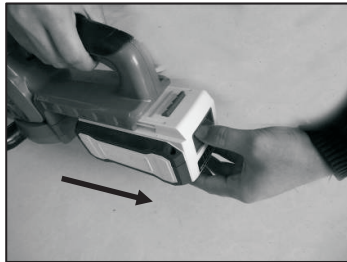 


Fig.2D

6. OPERATING THE HEDGE TRIMMER

⚠ WARNING: Before working on the device-cleaning, inspection, maintenance or other work-always turn off the device and remove the battery from the device. The hedge trimmer is equipped with a two-hand operator control.

6.1 REMOVE THE BLADE GUARD BEFORE OPERATION. (FIG.3)

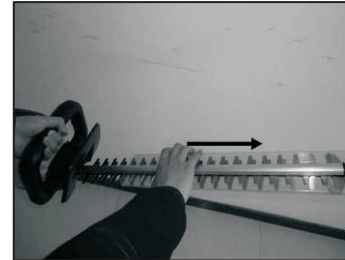 


Fig.3

6.2 Starting the device

First press the pushbutton switch on the front handle, then the switch trigger on the rear handle. (Fig.4)

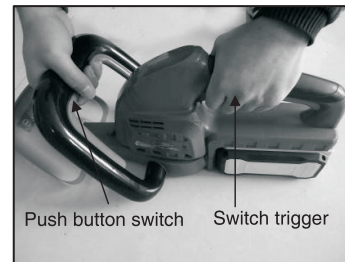 


Fig.4

6.3 Stopping the device

If you release one of the safety elements, the cutting blades will stop. (Fig.5)

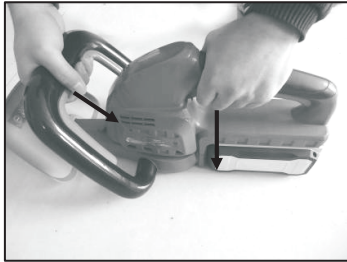 


Fig.5

6.4 Fitting the cutting guard

For your safety and storage, please fit the cutting guard after each operation. (Fig.6A/6B)

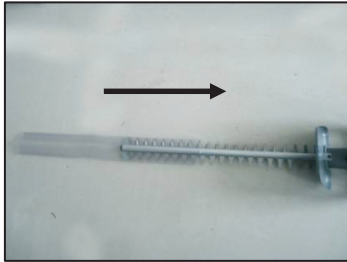 


Fig.6A



Fig.6B

7. MAINTENANCE AND CARE

⚠ WARNING: Switch off and remove battery from machine before adjusting or cleaning. For safe and proper working, always keep the garden product clean.

Note: To ensure long and reliable service, carry out the following maintenance regularly.

1. If the garden product should happen to fail despite the care taken in manufacture and testing, repair should be carried out by an authorised customer service agent for garden products.
2. Use only manufacturer's recommended replacement parts and accessories

⚠ WARNING: Switch the machine off and remove the battery. Ensure the battery is removed before storage.

1. Clean the exterior of the machine thoroughly using a soft brush and cloth. Do not use water, solvents or polishes. Remove all debris, especially from the ventilation slots of the motor.
2. Always lubricate the cutting blade with protective spray before storage.

3. Store the hedge trimmer in a secure, dry place out of the reach of children. Do not place other objects on top of the machine.

4. The battery should be stored between 0 ° C and 50 ° C.

8. TROUBLESHOOTING

The following chart lists problem symptoms, possible causes and corrective action, if your garden product does not operate properly. If these do not identify and correct the problem, contact your service agent.

⚠ WARNING: Switch off and remove the battery prior to any troubleshooting.

Fault	Remedial action
Hedge trimmer does not operate	Recharge the battery Ensure both locking levels are engaged
Hedge trimmer operates intermittently	Ensure both locking levels are engaged Contact Service Agent
Motor runs but blades remain stationary	Contact Service Agent
Cutting blade hot	Have blade sharpened Have blade inspected / overhauled Apply lubricant spray
Blade will not move	Recharge battery or Contact Service Agent
Excessive vibrations/noise	Contact Service Agent
Cutting time per battery charge too low	Apply lubricant spray Clean blade Recharge battery

9. WARRANTY

This product is warranted in accordance with legal regulations for a 24 month period effective from the date of purchase by the first user.

This product will not be covered if used in a commercial application.

This warranty covers all material or production failures, it does not include: defects from normal wear and tear, parts such as, bearings, brushes, cables, air cleaning elements, brake pad, clutch disc, tyre, wheel, recoil starter rope, belts, cutter blades, plugs, lubricant oils and grease or accessories. Damage or defects resulting from abuse, accidents or alterations, natural fading of painted or plated surfaces, sheet peeling and other natural deterioration.

Any damage that occurs from the use of non-genuine Cobra parts will not be covered.

We reserve the right to reject any claim where the purchase cannot be verified or when it is clear that the product was not maintained properly. (Clean ventilation slots, carbon brushes and serviced regularly)

Expenses incidental to the warranty claim that are not covered;

-Compensation for loss of time, commercial loss or rental costs of substitute product.

-Costs incurred for transportation to and from the dealership.

Any damage that occurs from the following will not be covered; exposure of the product to smoke and soot, chemical agents, bird droppings or other animal waste, seawater, sea breeze, salt or other environmental phenomena.

Any damage resulting from operating methods other than those indicated in the owner's manual will not be covered.

Your purchase receipt must be kept as proof for date of purchase. Your un-dismantled product must be returned to your dealer in an acceptably clean state, accompanied by your proof of purchase.

Please Register Your Product:

If your dealer did not collect registration information from you, please take a few minutes and register your purchase with Cobra.

You can register by going online to: www.cobragarden.co.uk and clicking on Product Registration.

10. ENVIRONMENTALLY FRIENDLY DISPOSAL



According to EU directive 2012/19/EU on electric and electronic equipment and its implementation into national law, all electric tools must be separately collected and environmentally friendly recycled. Alternative disposal: If the owner of the power tool does not return the tool to the manufacturer, he is responsible for proper disposal at a designated collection point that prepares the device for recycling according to national recycling laws and regulations.

This does not include accessories and tools without electric or electronic components.

11. EC-DECLARATION OF CONFORMITY

We herewith declare,	Cobra Garden Machinery, Henton & Chattell Ltd, London Road, Nottingham NG2 3HW UK
That the following machine complies with the appropriate basic safety and health requirements of the EC Directive based on its design and type, as brought into circulation by us.	
In case of alteration of the machine, not agreed upon by us, this declaration will lose its validity	
Product	Cordless Hedge Trimmer
Machine Type:	HT55040VZ (DYM400202)
Rated voltage	40V d.c.
Cutting length:	550mm
Measured sound power level:	92.8dB(A);
Guaranteed sound power level:	96dB(A); Notified Body for EC Directive 2000/14/EC:0036 TüV Süd Industrie Service GmbH Westendstrasse 199 . 80686 München . Deutschland
Applicable EC Directives:	EC Directive of Electromagnetic Compatibility 2014/30/EU EC Machinery Directive 2006/42/EC EC Directive of noise emission 2000/14/EC RoHs Directive 2011/65/EU
Applicable Harmonized Standards:	EN 60745-1 EN 60745-2-15 EN 55014-1 EN 55014-2
Authorized Signature/Date/Place:	 Peter J. Chaloner 05/06/2020
Title of Signatory:	Managing Director
Name and address of the person authorized to compile the technical file	Cobra Garden Machinery, Henton & Chattell Ltd, London Road, Nottingham NG2 3HW UK