

# SERVICE BULLETIN

## COBRA

Brand: COBRA

Issue Date: 12/10/21

Details: Connection of wiring

Models Effected: CHIP650LE CHIPPER




### INSTRUCTIONS

- Infeed to main body.

#### HOW TO

##### STEP 1

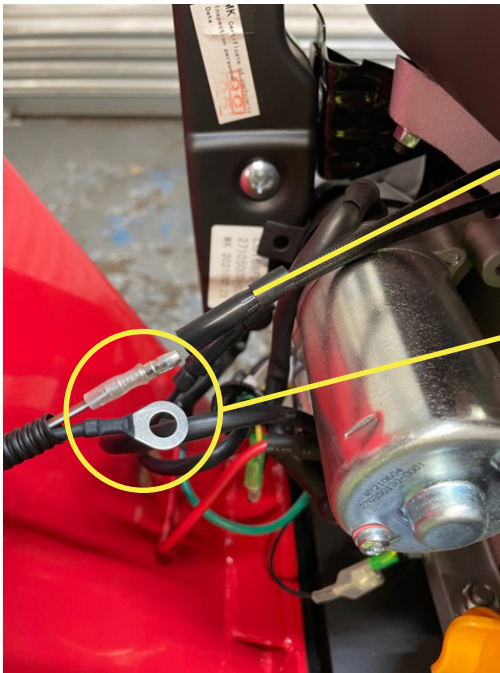


WIRE FROM ENGINE

WIRES FROM INFEED

CONNECT WIRES TOGETHER

CONNECT THIS EARTH WIRE  
(STEPS 3 AND 4)

##### STEP 2

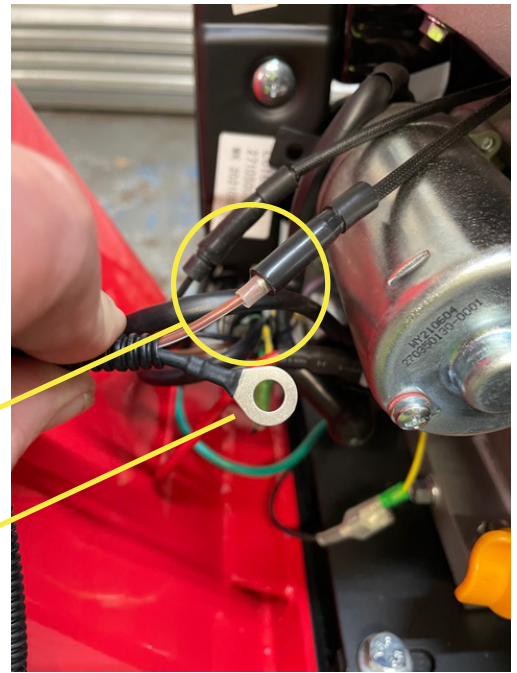

**STEP 3**



REMOVE THIS NUT

PLACE EARTH WIRE OVER  
THREAD - REPLACE AND  
TIGHTEN NUT

**STEP 4**



**STEP 5**



CONNECT REMAINING MULTI  
PLUG FROM IN FEED TO MAIN  
BODY.

IGNORE THIS CONNECTION THERE  
WILL BE ONLY 1 (YELLOW) CABLE  
ATTACHED WHICH IS CONNECTED  
AT THE FACTORY.

**STEP 6**

